

Bobbin Type by Machine

Mj sewing SUPPLY

Please note that this guide is intended as a reference but not as a substitute to your machine owner's manual. Please check carefully before ordering bobbins.

www.mjsewingsupply.com

Brand	Machine	L Bobbin	15/A Bobbin
Babylock			
	Crafter's Choice (BLCC)		X
	Creative Pro (BL37, BL40)	X	
	Decorator's Choice (BLDC)		X
	Ellageo (BLL), Ellageo Plus (BLL2)		X
	Ellageo (ESG2, ESG3)	X	
	Ellegante (BLG), Ellegante 2 (BLG2), Ellegante 3 (BLG3)		X
	Ellisimo (BLSO), Elisimo Gold (BLSOG)		X
	Ellure (BLR), Ellure Plus (BLR3)		X
	Ellure (ESL)	X	
	Embroidery Professional EMP6, BMP6, BMP8, & BMP9	X	
	Endurance 6 Needle (BND9)	X	
	Enterprise BNT 10 & BNT 10L	X	
	Esante (BLN)		X
	Esante (ESE2)	X	
	Espire (BLSR)		X
	Espire (ESP)	X	
	Grace (BL40A)		X
	Intrigue (INT)		X
	Jane (BL500A)	X	
	Quilter's Choice (BLQC)		X
	Quilter's Choice (BLQP)	X	
	Symphony (BLSY)		X
Bernette			
	Deco 350 & 360 (by Brother)	X	
Bernina			
	Artista 165, 170, 180, 185QEE, 200E, 630E, 640E	X	
	Aurora 430QEE, 440QEE	X	
	Bernette 730E & 740E		X

Bobbin Type by Machine

	Deco 300, 500, 600, 930	X	
	Deco 330, 340		X
Brother			
	CS - 8072	X	
	BC - 1000		X
	CE - 4000, 5000PRW, 5500PRW, 8080PRW		X
	CP - 6500, 7500		X
	CS - 100T, 5055PRW, 6000, 6000B, 6000i, 6000T, 8150		X
	Dreamweaver XE		X
	Duetta 4500D		X
	ES - 2000, EX-660		X
	HE - 120, 240; HS-2000		X
	Innov í s- 40, 80, 900D, 950D, 1000, 1500D, 2500D, 2800D, 4000D, 5000		X
	LB - 6770PRW, 6800PRW		X
	LS - 30,1217, 2125, 2125i		X
	LX - 2500, 3125, 3125E		X
	NX - 200, 250, 400, 400Q, 450, 450Q, 600, 650Q		X
	Pacesetter PS21, PS-3700		X
	PC - 210, 210PRW, 420, 420PRW		X
	PC - 2800, 3000, 6000, 6500, 7000, 7500, 8200, 8500D, 7500, 8200, 8500D	X	
	PE - 100, 150, 150V, 170D, 200, 300S, 400D	X	
	PE - 500, 700, 700II, 750D, 770, 780D		X
	PR - 600, 600II, 620, 1000	X	
	PS - 1000, 1250, 2200, 2300, 2500	X	
	QC - 1000		X
	Quattro 6000D, Quattro 2 6700D		X
	SE - 270D, 350, 400		X
	SQ - 9000, 9050		X
	ULT - 2001, 2002D, 2003D	X	
	VX - 1435		X
	XL - 2230, 2600, 2600i, 2610, 3100, 3500, 3750, 5130, 5232, 5340, 5500, 5600, 5700, 6452, 3510, 3500T, 6562, 7700		X
	XR - 40, 46C, 52C, 65T		X
Husqvarna			
	Viking Designer I, Quilt Designer II	X	
	Viking Designer SE Rose	X	
	Viking Platinum 950E	X	

Bobbin Type by Machine

	Viking Scandinavia 400 (Rose)	X	
Janome			
	All new Elna - 5000, 9000, 9500, 9700, 300E, 350E, 10000, 10001, 11000		X
	MB-4	X	
Juki			
	TL-98	X	
	T-100, E80		X
Kenmore			
	All models		X
Pfaff			
	Creative 2170, 2144, 2134, 2124, 2140, 7570	X	
Quantum Futura			
	100, 104, 117, 118, 132, 132Q, 140Q, 2623, 2638, 2639, 2662, 3962		X
	7400 series		X
	IZEK		X
Singer			
	6400 Series		X
	7312, 7322, 7350		X
	9910, 9920, 9940		X
	Scholastic, Scholastic Plus XL1000, XL6000		X
Viking			
	Designer I, II, SE, Viking Rose	X	
White			
	3300, 4400	X	
	Rotary		X
<p>Please note that this guide is intended as a reference but not as a substitute to your machines owner manual. Please check carefully before ordering bobbins.</p>			